

ENT 7

Capacitance Level Switch



- + Read guide before use!
- + Observe all safety information!
- + Keep guide for future use!

If In Doubt ASK !

+44(0)1293 658360
tech@afriso-eurogauge.co.uk



About this User Guide

This guide is part of the device installation.

Read this guide before using the device.

Keep this guide during the entire service life of the device and always have it readily available for reference.

Always hand this guide over to future owners or users of the device.

Contents

2	Warning terms General installation and wiring requirements General troubleshooting
3	General safety General handling and storage
4	Staff qualification Modification Warranty Spare parts Recycling Limit of liability Copyright Customer satisfaction Contact Afriso Eurogauge
5	Application Mechanical installation Electrical installation
6	Electrical wiring diagram Commissioning Maintenance
7	Outline drawing
8	Specification
9	Part numbers and descriptions
10	Declaration of conformity Declaration of origin

WARNING TERMS

The type and source of danger associated with this device is shown here.

Precautions to take in order to avoid the danger are shown here.
There are three different levels of warning:



DANGER	Imminent danger! Failure to observe the information will result in death or serious injuries.
WARNING	Possible imminent danger! Failure to observe the information may result in death or serious injuries.
CAUTION	Dangerous situation! Failure to observe the information may result in minor or serious injuries and damage to property or device not working as expected.

General Installation and Wiring requirements

The device must be installed in accordance with the details given later in this guide.

All wiring must be in suitable cable for the application conditions and must comply with the relevant regulations of the electrical supply authority concerned, together with any other statutory requirements which may affect the complete installation.

It is recommended that cable with polyethylene or PVC insulation with a conductor size of at least 1.0mm² is used.

CAUTION

ATEX installations may only be carried out by qualified and trained personnel in accordance with ATEX specific requirements.



MICC cable (Pyro) must never be used under any circumstances

Signal cables should be run separately from any cables carrying mains voltages.

If signal cables are to be run through areas of high electrical interference it is recommended that screened cable is used with the screens being terminated only to the device earth terminal or as specified.

Specific terminal connection information may be found on identification label(s) on the device unless otherwise advised..

Refer to separately supplied installation guides for information regarding external components of the system such as level sensors, sounders and beacons etc.

CAUTION



Electrical systems may be impacted and the device switching contact (if fitted) may be destroyed by voltage peaks when inductive loads are switched off.

Use commercially available standard RC combinations such as 0.1µF/100Ω for inductive load switching.

Troubleshooting

Repairs and fault finding may only be performed by Afriso Eurogauge personnel or qualified personnel under Afriso Eurogauge instruction.

Refer to separately supplied installation guides for information regarding fault finding and repairs on external components.

Safety

Intended use

The level switch device may only be used for continuous level monitoring in metal containers, silos and tanks for the storage of the following media, provided such media can be detected with a capacitance probe.

- Liquids
- Granulated materials
- Powdered materials

Any use other than the application explicitly permitted in this guide or authorised by Afriso Eurogauge is not permitted.

Predictable incorrect application

The device must never be used in the following cases:

- Hazardous area (ATEX)
If the device is operated in hazardous areas, sparks may cause deflagrations, fires or explosions.

Safe handling

This product represents state-of-the-art technology and is made according to the pertinent safety regulations. Each device is subjected to a function and safety test prior to shipping.

Operate the device only when it is in perfect condition. Always observe the operating instructions, all pertinent local and national directives and guidelines as well as the applicable safety regulations and directives concerning the prevention of accidents.

WARNING Severe burns or death caused by mains voltage (110/230 VAC, 50/60Hz) in the device



Do not expose the control unit to water.

Interrupt the mains voltage supply before opening the device or before performing maintenance and cleaning work and make sure it cannot be switched on by accident.

Do not tamper with or modify the device in any way whatsoever.

Transport and storage

CAUTION Damage to the device due to improper transport.



Do not throw or drop the device.

Protect from wetness, humidity, dirt and dust.

CAUTION Damage to the device due to improper storage.



Protect from wetness, humidity, dirt and dust.

Store the device in a clean and dry environment.

Only store the device within the permissible temperature range.

Staff Qualification

The device may only be mounted, commissioned, operated, maintained, shut down and disposed of by trained staff. Electrical work may only be performed by trained electricians and in compliance with all applicable local and national directives.

Modifications to the device

Changes or modifications made to the device by unauthorised persons may lead to malfunctions and are prohibited for safety reasons unless specifically instructed by the manufacturer.

Use of spare parts and accessories

Use of unsuitable spare parts and accessories may cause damage to the device. Use only genuine manufacturer spare parts and accessories.

Liability information

The manufacturer shall not be liable in any form whatsoever for direct or consequential damage resulting from failure to observe the technical instructions, guidelines and recommendations given in this guide or ancillary documents.

The manufacturer or sales agent shall not be liable for costs or damages incurred by the user or by third parties in the usage or application of this panel, in particular in case of improper use of the device, misuse or malfunction of the connection, malfunction of the device or of connected devices.

The manufacturer or sales agent shall not be liable for damage whatsoever resulting from any use other than the use explicitly permitted in this guide or ancillary documents.

The manufacturer shall not be liable for misprints.

Disposal and Recycling

Switch off the supply voltage and disconnect from device.

Disconnect all other terminals and remove wiring from device.

Dismount the device.

To protect the environment, this device must **not** be disposed together with normal household waste

Dispose of the device according to local directives and guidelines.

This device consists of materials that can be recycled.

Electronic inserts can be easily separated and the device consists of recyclable materials.

Where it is not possible to dispose of the device locally in accordance with environmental regulations please contact us for return or disposal instructions.

Warranty

The manufacturer's warranty for this device is 24 months after the date of purchase.

This warranty shall be good in all countries this device is sold by the manufacturer or its authorised dealers or agents.

Refer to separately supplied installation guides for information regarding warranty on external components.

Copyright

The manufacturer retains the copyright to this device. This guide or any separately supplied installation guide may not be reprinted, translated, copied in part or in whole without prior written consent.

We reserve the right to make technical modifications with reference to the specifications in this guide without notice.

Customer Satisfaction

Customer satisfaction is our prime objective.

Please get in touch with us if you have any questions, suggestions or problems concerning the device or external components.

Contact

Afriso Eurogauge Ltd
Unit 4, Satellite Business Village
Fleming Way, Crawley
West Sussex. RH10 9NE

Tel: +44(0) 1293 658360 Fax: +44(0)1293 528270

email: techoffice@eurogauge.co.uk

Web: www.eurogauge.co.uk

APPLICATION

The ENT 7 Capacitance Level Switch is intended for high or low level detection of liquids, slurries, free-flowing powders and granular materials in silos and tanks, etc.

The choice of electrode configuration makes the ENT 7 equally useful with conducting as well as non conducting products.

The device is completely self-contained, requiring only a supply voltage and having a set of independent voltage-free changeover contacts for connection to external control equipment or alarms.

Operation

The device operates on the principle of a changing electric field caused by the presence or absence of material around the electrode. This change, after amplification, is used to operate the output relay.

An internal Failsafe Switch offers the option of failsafe facilities for either high or low level alarms, LED indicators show the state of the output relay.

A multi-turn Sensitivity Control allows accurate adjustment of the switch point.

INSTALLATION

Check that the electrode and the insulation is correct for the application, if in doubt, consult the Afriso Eurogauge Technical Department for advice.

Mechanical

CAUTION



The device must be mounted in such a position that the maximum permissible ambient (external) temperature of 60°C is not exceeded. When the device is mounted into the side of the vessel ensure that the cable entries point downwards.

Mounting is by either a 1", 1½" BSP parallel or 1½" BSP taper thread. Flanges are available as an option. When fitting the device into the mounting boss, use a 'C' spanner on the metal boss.

DO NOT use the housing to turn the device into the boss.

Make certain that the rubber sealing ring is in place before securing the cover and that the four cover screws are securely tightened down.

Electrical


The supply and relay output connections are entirely isolated and may be used separately.

Connect the supply to the appropriate terminals on the 'SUPPLY' terminal block; the connectors are removable.

The compression glands are for cables with an outer diameter of 5-8mm and must be securely tightened to prevent the ingress of dust or moisture and to ensure compliance with the IP67 physical protection.

The internal earth is connected to the mounting boss and must also be connected to a suitable external earth.

Wiring Connections

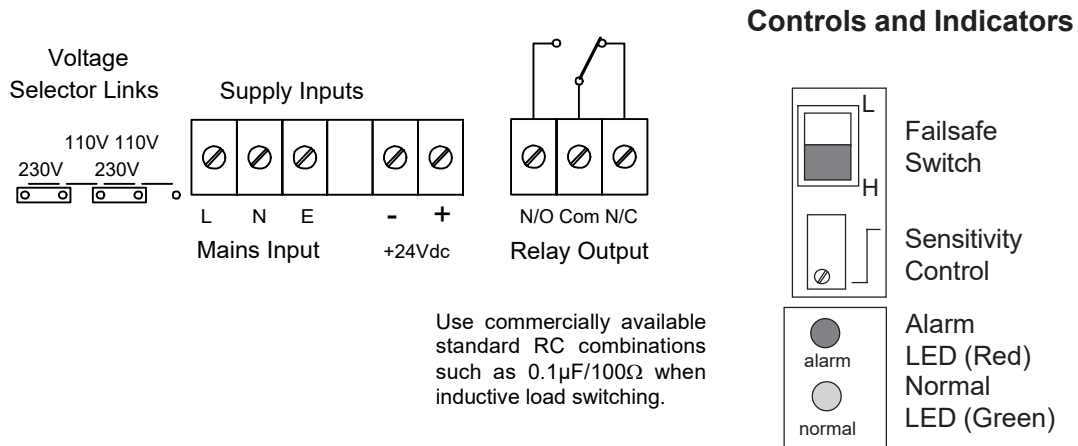

- Notes:**
1. The unit is supplied **either** from an ac supply (110/230V 50/60Hz) depending on position of voltage links.
or from a +24Vac or +48Vdc supply depending on model
 2. The system 0 Volt rail is connected to earth.

Commissioning

Set the fail-safe switch to high or low level as required by the application.

With the vessel **EMPTY**, use the trim tool provided on the inside of the instrument lid, or a small instrument screwdriver to adjust the multi-turn switchpoint control potentiometer.

High Level (HL)

If the red alarm LED is on - turn the control clockwise until the green LED comes on, then turn the control clockwise one more turn.

If the green normal LED is on - turn the control anti-clockwise until the red LED comes on, then turn the control clockwise until the green LED comes on again and then turn the control clockwise for one more turn.

Low Level (LL)

If the green normal LED is on - turn the control clockwise until the red LED comes on, then turn the control clockwise one more turn.


If the red alarm LED is on - turn the control anti-clockwise until the green LED comes on, then turn the control clockwise until the red LED comes on again and then turn the control clockwise for one more turn.

For maximum sensitivity the control may be turned by half a turn only and not one turn as described above.

Maintenance

No maintenance is normally required. However, it is advisable that the electrode is checked for any signs of damage or wear at intervals when the installation is cleaned.

Basic Outline and Dimensions

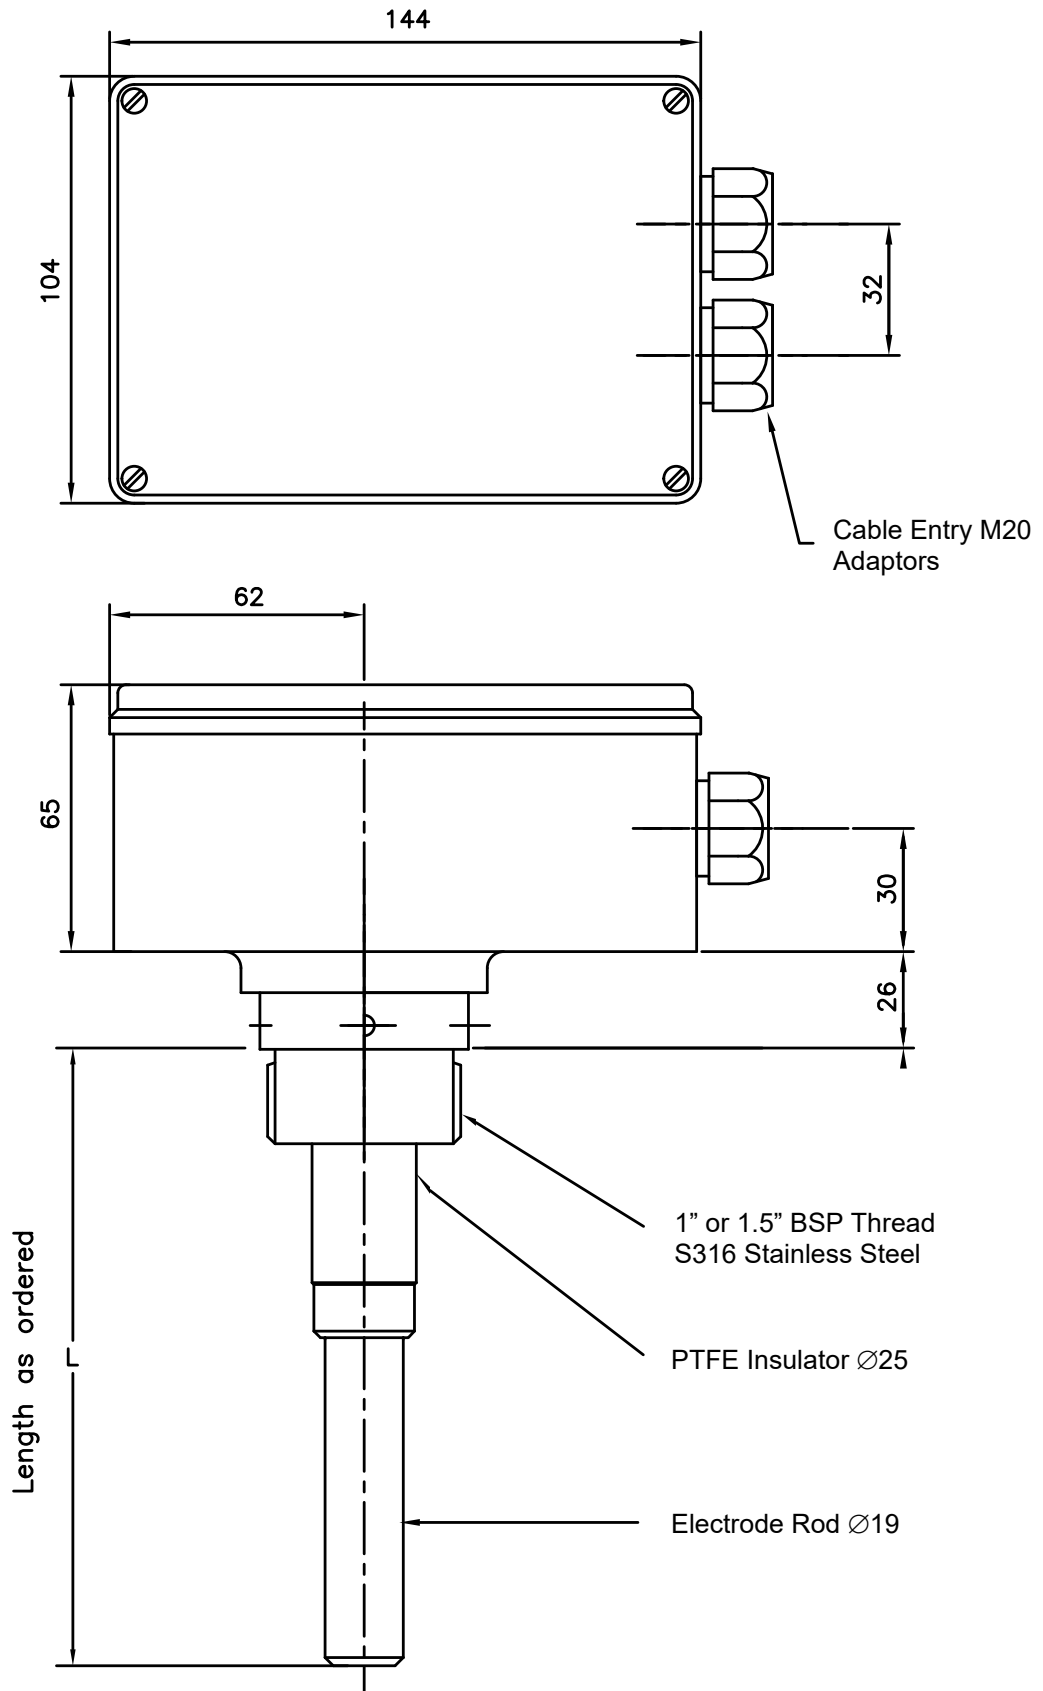


Specification

Supply	110-120 volts (range 95-130V), 50/60Hz, 4VA . 220-240 volts (range 190-260V) Selected by two plug-in links. Connect to 'AC SUPPLY' terminals. 24Vdc (20 - 28V), 4 Watts. Connect to '24V' terminals. 48Vdc (44 - 52V), 4 Watts. Connect to '48V' terminals.
Part Numbers	1½" BSP carbon (mild) steel fitting 5443 32 1040 Partly insulated, PP, 19mm Ø x 150mm Stub Electrode x M12. 5443 32 1000 Partly insulated, PP, 19mm Ø <= 1000mm Electrode. 5443 62 1000 Fully insulated, PP, 25mm Ø x 300mm Electrode. 5443 68 1410 PP insulated flexible probe, M/S adjustable weight. 1" BSP stainless steel fitting 5412 22 1000 Partly insulated, PTFE, 19mm Ø x 300mm Stainless Steel Electrode. 5412 82 1000 Fully insulated, PTFE, 25mm Ø x 225mm Heavy Duty Electrode. 1½" BSP stainless steel fitting 5413 32 1040 Partly insulated, PP, 19mm Ø x 150mm Stub Electrode x M12. 5413 32 1000 Partly insulated, PP, 19mm Ø <= 1000mm Electrode. DN50 PN16 Flange Fitting 5419 22 506S Partly Insulated, PTFE, 19mm Ø Electrode, Part screened, Standoff
Capacitance Range	200pF ΔC, [100pF ΔC with 'H' setting - factory option only].
Sensitivity	<0.5pF@Co=10pF, <1.0pF@Co=100pF. Adjustable by multi-turn control - 10pF/turn.
Application	High or low level detection of liquids, slurries, free-flowing powders and granular materials in silos, tanks, sumps and pipelines, depending upon the type of electrode.
Output Switching	Single pole changeover contacts - voltage-free. Rating - 250V @ 4A max, 500 VA @ Cos θ = 0.7, 100 watts DC
Indicators	LED (Green) Normal On when output relay energised. LED (Red) Alarm On when output relay de-energised.
Failsafe	High or Low level failsafe selection by internal switch. High Level (maximum failsafe) - Electrode uncovered - relay energised - Green LED on. Low Level (minimum failsafe) - Electrode covered - relay energised - Green LED on.
Temperature	Ambient -30°.... 60°C. Electrode -20°.... 230°C. (Configuration Dependant) Note: for higher electrode temperatures a standoff must be used (works fitted)
Terminals	1 four way and 1 three way plug-in terminal blocks for supply and relay outputs - for 1mm ² conductor size.
Cable Entry	2 x Gland entries. (Configuration Dependant)
Housing	Glass loaded ABS or gravity cast aluminium type LM6 (< 0.1% magnesium) (Configuration Dependant)
Protection	IP67 (BS5490/IEC529).
Mounting Boss	1", 1½" BSP parallel or 1½" BSP taper thread. (Configuration Dependant)
Weight	Standard Unit - nominal 5 kg. (Configuration Dependant)

Coding and Classification Chart – ENT7 Capacitance Level Switch (Compact)

1 2	3	4	5	6	7	8	9	10	11
Series Type	Process Connection Material	Process Thread or Connection Type	Insulator Material	Electrode Type	Cable Entry Type	Special Features	Special Features	Special Features	Special Features
5 4	0 = N/A 1 = Stainless Steel 2 = Aluminium Alloy 3 = 4 = Carbon Steel	0 = N/A 1 = N/A 2 = G 1.0" BSP 3 = G 1.5" BSP 4 = 1.25" NPT 5 = 1.5" NPT 6 = 7 = G 1.5" BSPT 8 = 1.0" NPT 9 = Flanged	0 = N/A 1 = PI PVC 2 = PI PTFE 3 = PI PP 4 = 5 = 6 = FI PP 7 = FI PVC 8 = FI PTFE 9 = PI Ceramic	0 = N/A 1 = Ø 9.50 Rod 2 = Ø 19.00 Rod 3 = Ø 12.00 PP Cable 4 = Ø 16.00 Rod 5 = Double Insulated 6 = Band Electrode 7 = Ø 2.50 PAS Cable 8 = Ø 6.00 PP Cable 9 = Ø 6.00 SUS/ Cabl	0 = N/A 1 = PG 11 Gland 2 = PG 13.5 Gland 3 = FGR Gland 4 = M20 Gland 5 = PG 1(M)-M20(F) 6 = M20 Gland (ATEX) 7 = M16 Gland 8 = PG 16 Threaded 9 =	0 = N/A 1 = SUS1 Weight/Screen 2 = 3 = 4 = M/S: Weight/Screen 5 = 6 = S/S: HS Adaptor 7 = 8 = 9 =	0 = Standard Assembly 1 = Adjustable Weight 2 = Crimped Weight 3 = Welded Weight 4 = M12 Stub Electrode 5 = 6 = Partially Screened 7 = 8 = 9 = Client Special H = High Temp Barrier S = Stand Off	0 = Standard Assembly 1 = LED Light Guides in Lid 2 = 3 = 4 = 5 = 6 = 7 = 8 = 9 =	XXXX
<p>ATEX = ATEX (Ex) Approved 100 = 100mm Insulator EMA = Afriso EMA Specification STF = With Self Test Facility 48V = 48V Power Supply A = Aluminium Housing Option IPS = Internal power supply fitted 375 = Extended Weight Assembly 375mm T = Tropicalised PCB assembly</p>									

PI = Parity Insulated
FI = Fully Insulated

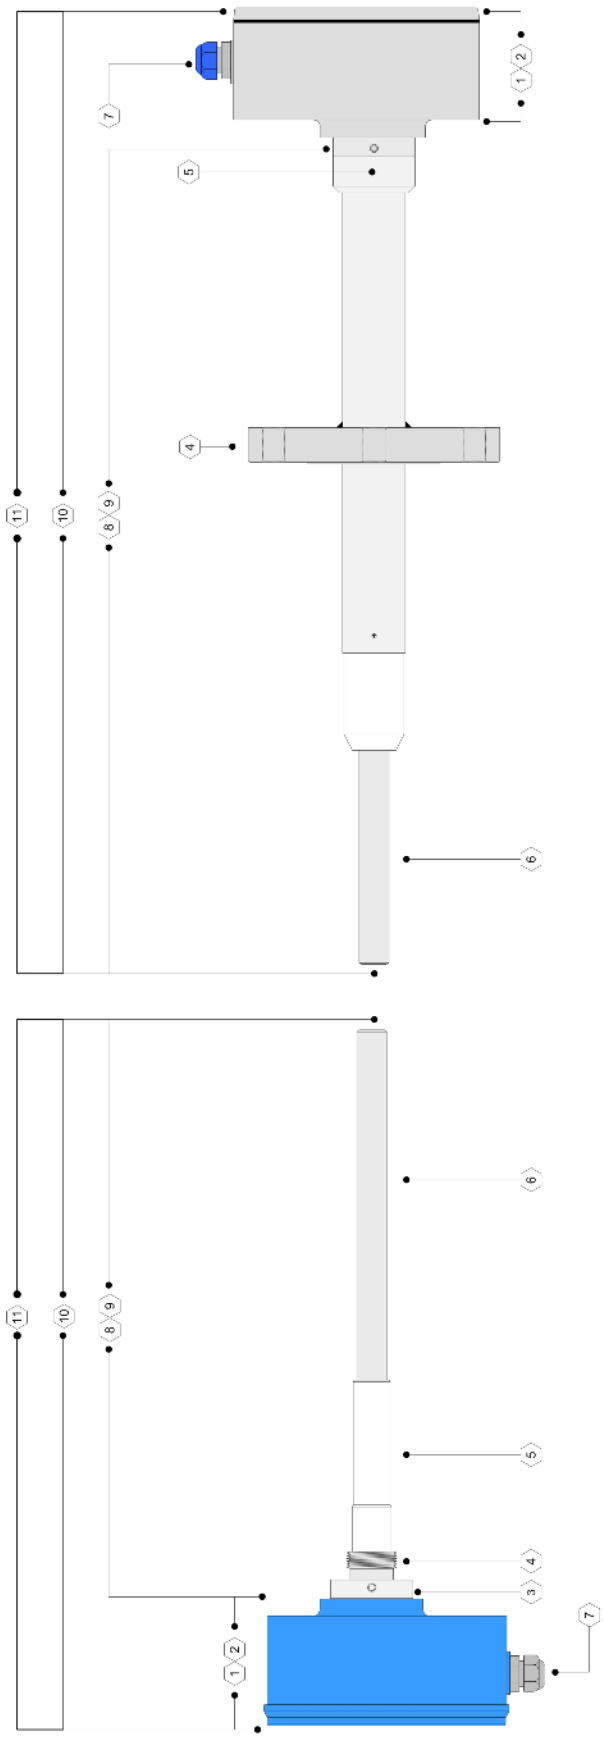



Declaration of Conformity

ENT 7 Capacitance Level Switch

This is to certify that the above named product fully complies with the Electromagnetic Compatibility Directive 2014/30/EU and the Low Voltage Directive 2014/35/EU of the European Union and with the requirements of the normative sections of the following harmonised European Standards.

BS EN 61000-6-3:2007+A1:2011


Electromagnetic Compatibility - Generic Emission Standard.
Emission standard for Residential, Commercial and Light Industry.

BS EN 61000-6-2:2005

Electromagnetic Compatibility - Generic Immunity Standard.
Immunity for industrial environments

BS EN 61010-1:2010

Safety requirements for electrical equipment for measurement, control and laboratory use.

Signed:  D C Ward Position: Technical Manager Date: 14/09/2016


This declaration applies to all 54xx Series part number(s) as specified in this User Guide

Declaration of Product Origin

ENT 7 Capacitance Level Switch

We confirm that the following product designs originate and have been wholly manufactured within the United Kingdom of Great Britain and Northern Ireland by:

Afriso Eurogauge Ltd.
Unit 4, Satellite Business Village,
Fleming Way, Crawley,
West Sussex.
RH10 9NE. United Kingdom.
Tel: +44 (0)1293 658360
Fax: +44 (0)1293 528270
sales@afriso-eurogauge.co.uk
www.eurogauge.co.uk

Signed:  D C Ward Position: Technical Manager Date: 08/01/2014

This declaration applies to all 54xx Series part number(s) as specified in this User Guide